

Technical Quick Guides

Setting up Wireless PIR Out of Box

In this Quick Guide we are going to be setting up the Wireless PIR Camera from Dahua to our Alarm Hub using DMSS App.





Inside the Box it should contain the Following:

Wireless PIR
Batteries
Mounting Screws & User Manual





Flip the PIR Camera over and unscrew the single screw located at the bottom, to remove the shield push down on the cover and slide it off to detach.





Once Detached Please unscrew these 2 screws to remove a secondary panel.





Once the Secondary Panel Is detached you will see this!






Please unpack the Batteries from the cardboard box and place them into the PIR as labelled.





Once the Batteries are in the PIR we can move onto adding it as a peripheral. Open your DMSS App and Select the "+ Peripheral" button as circled in the image below.

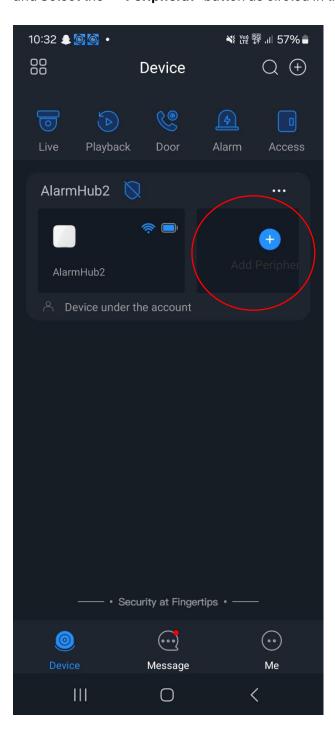




It will now tell you to scan the QR Code on the back of the PIR, please do so. (Should be located toward the top)





It will now say the Device Serial Number and ask for a Security Code, leave this blank and press the next button.

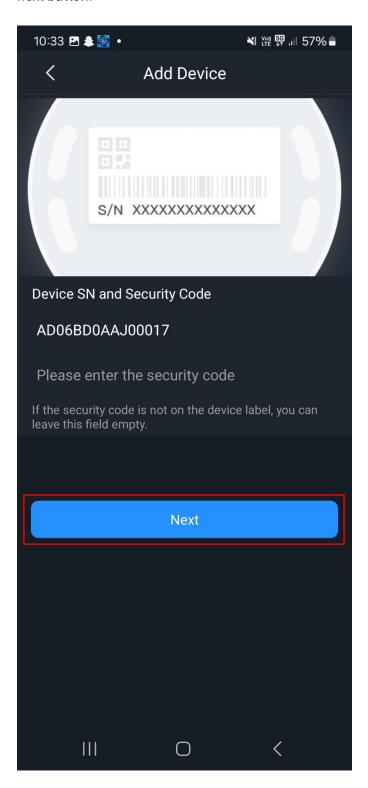




It will now say the PIR Device has been found, Press Next to continue.






On your screen it should ask you which "Area" you would like to set up the PIR, Select accordingly and press next!

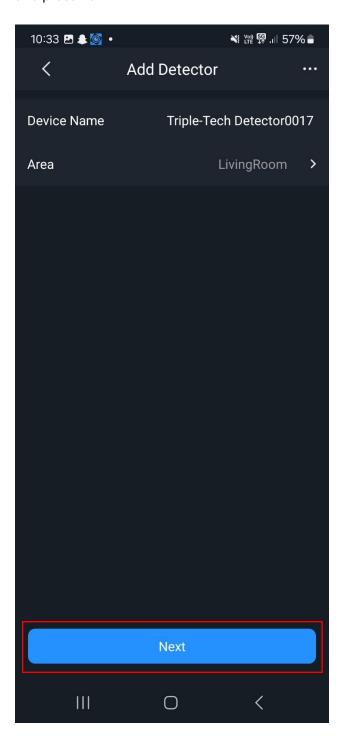




It will now show a screen with instructions, You should notice that your Alarm Hub is Flashing Blue. If so, we are now going to turn the PIR Camera ON from the Switch located on the back and press Next!

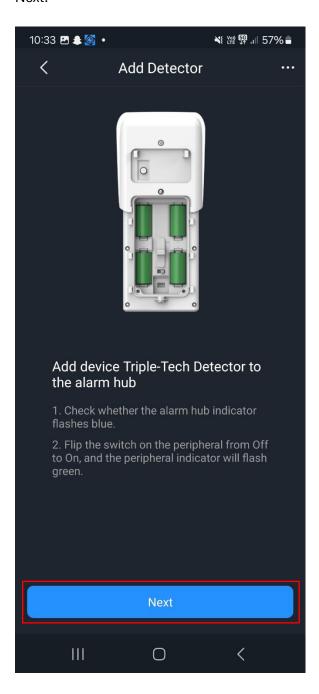



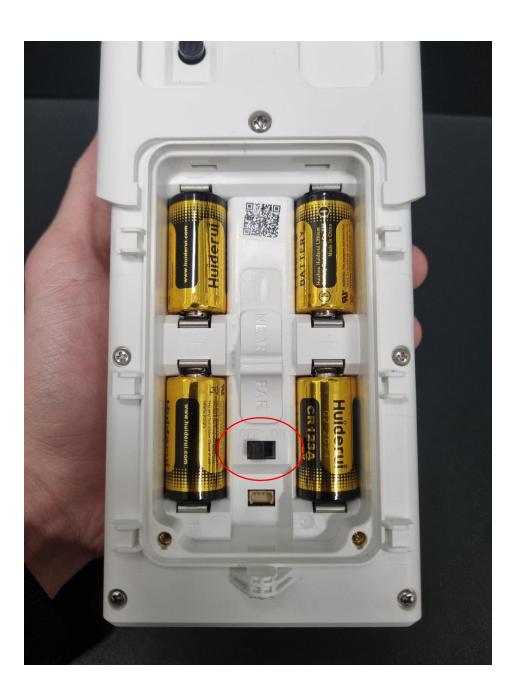









Once you have turned it ON and pressed Next it should show a screen saying Pairing.

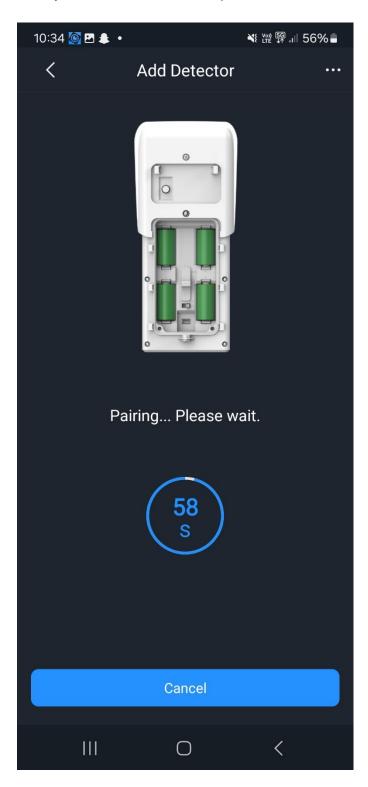



Once Paired it should say the Device has been added and now you press Done.

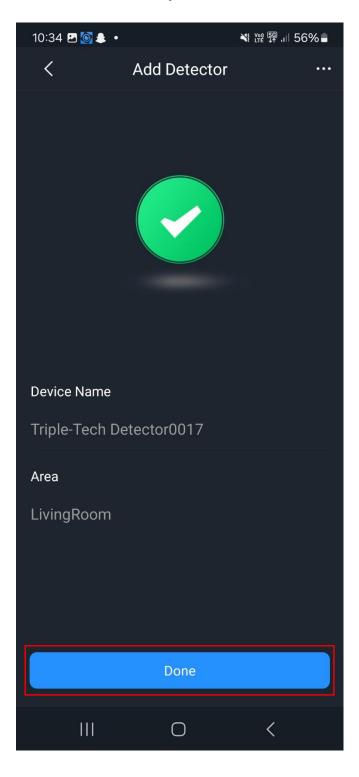



You Have Successfully Added the Wireless PIR to the Alarm Hub! You may now put back the backing on and screw them back in to prevent the tamper switch from being triggered.

Note: If the Alarm Hub is Flashing Yellow and you Have installed all necessary back covers on just arm and disarm the device and it will go back to green!

