



## Technical Quick Guides

### AcuPick Search on Local UI


From the live view on the NVR's local interface, right click anywhere on the screen and select **Search**

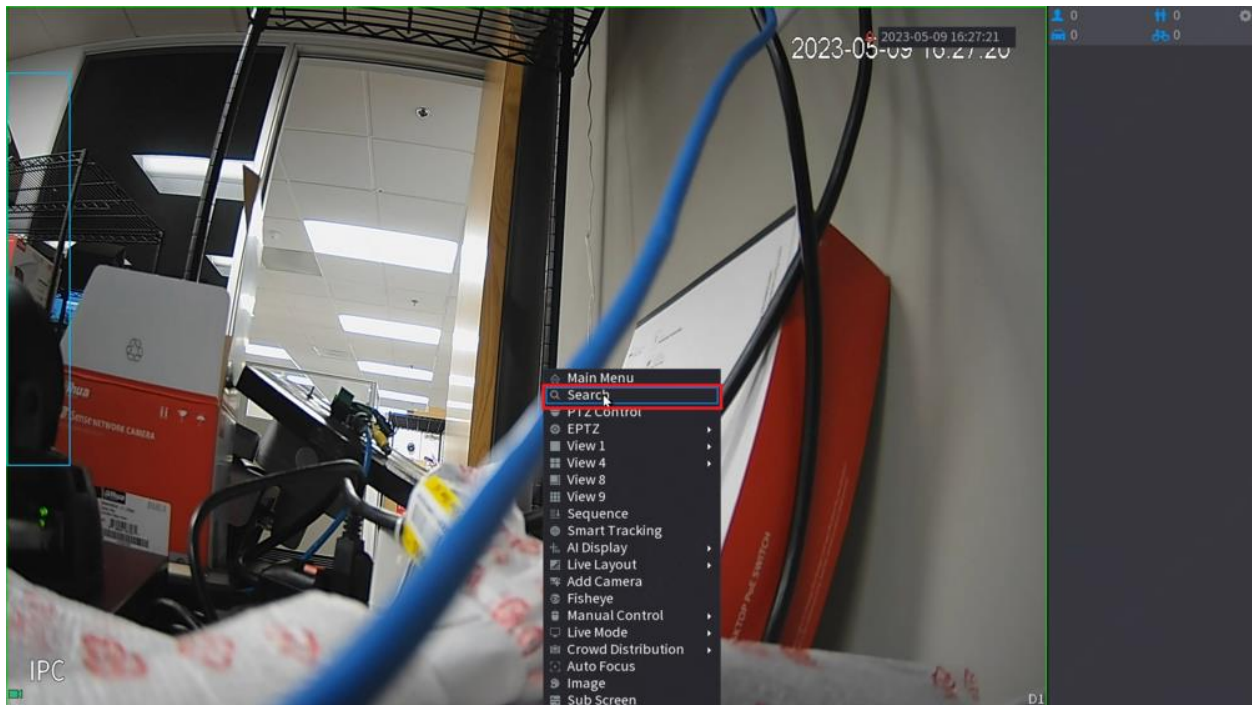

Check the box for a single camera on the right (Please Note: AcuPick will only function if only 1 camera is selected.) Select a data at the top right that has a dot underneath it, then click on the timeline to start playing recorded footage. Make sure the AI data icon is selected above the timeline.

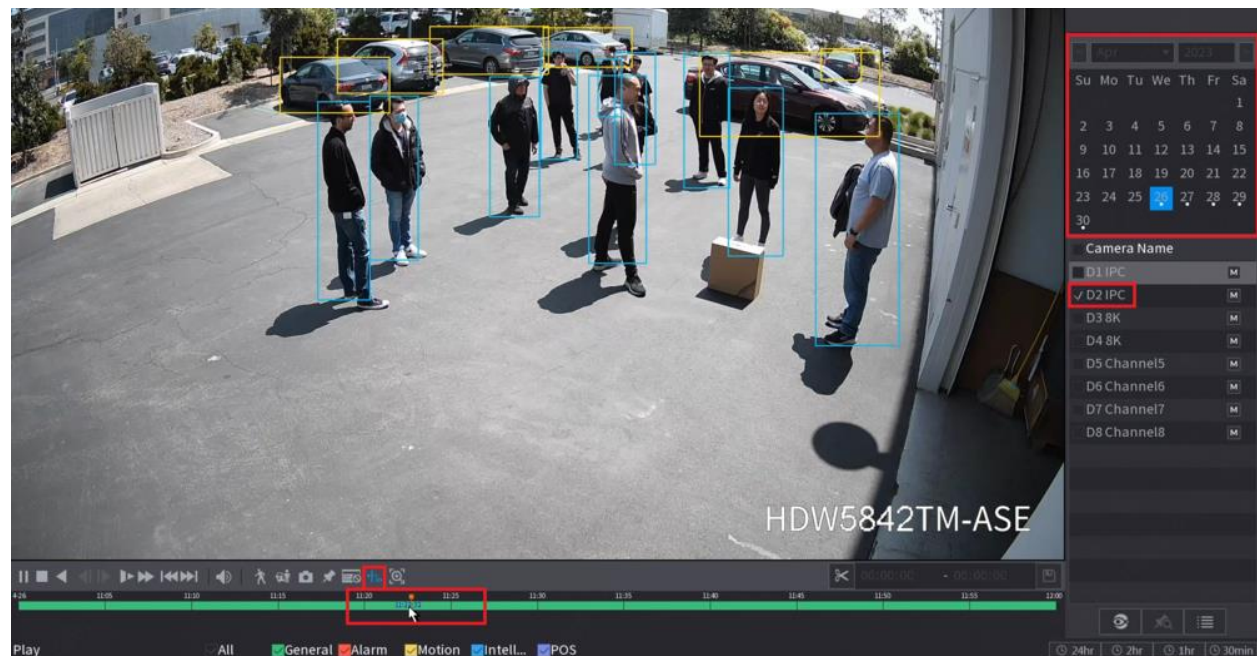


Once you find the person you want to track, press the AcuPick icon right above the timeline. Then click on the blue box around the person and click on the magnifying glass icon below the blue box.

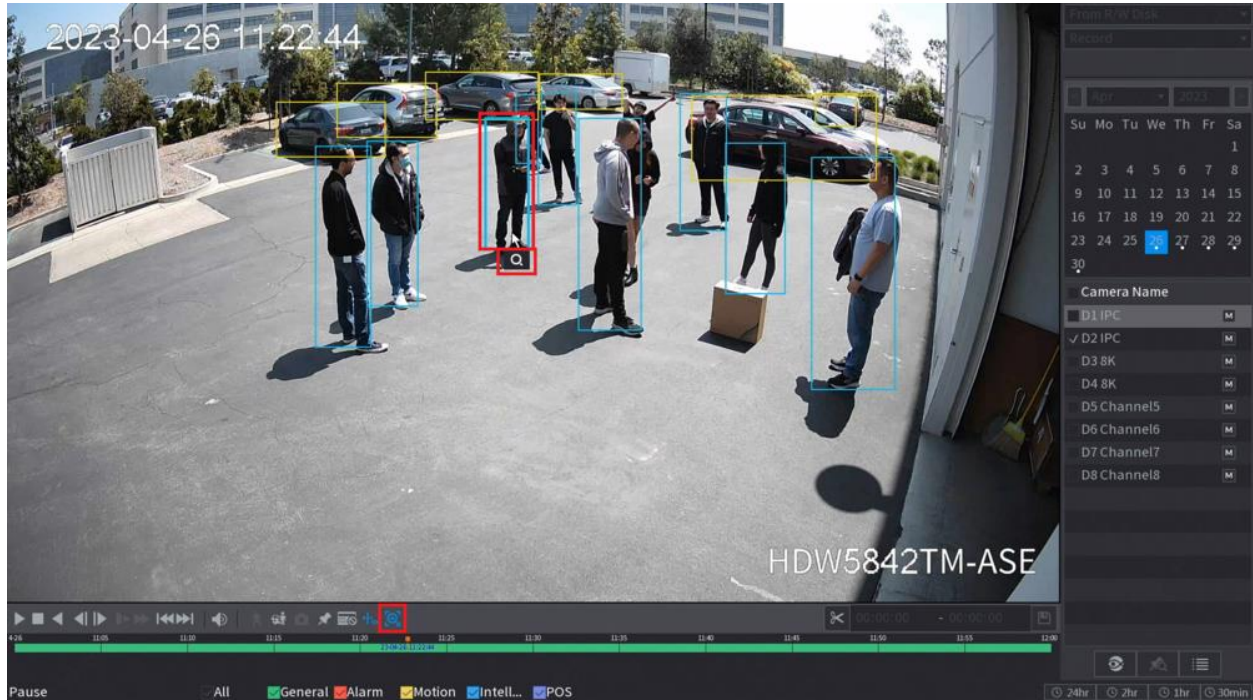


Select which channels you want to search from the Channel drop-down, adjust the time period from the Period, Start Time and End Time options.

When you are done adjusting those settings, click the Search to refine the search results. Adjust the Similarity slider at the top to a value that shows the most accurate results for the person you are searching for.

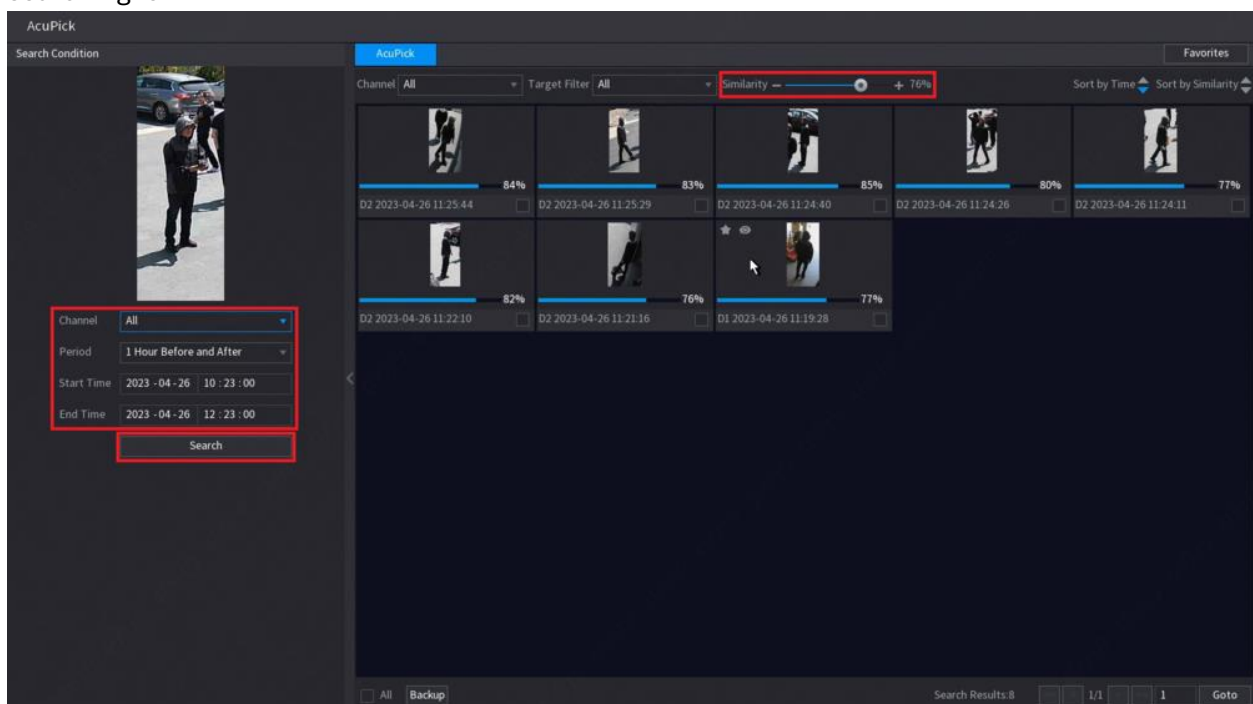



Double click on any of the result images to play a record clip. It will automatically play 10 seconds before and 10 seconds after the event. (This amount of time can be adjusted at the bottom right while the video is playing).

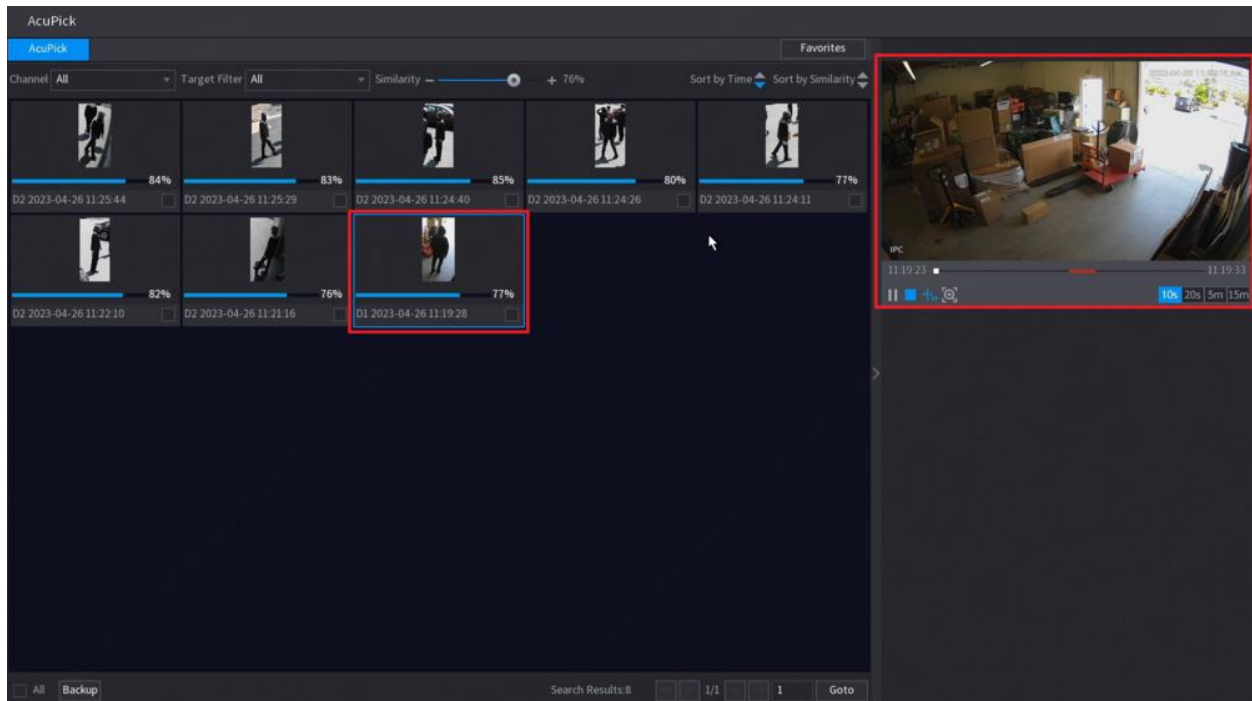

Double click on the video playback to make it full screen.

