



Technical Quick Guides

Add VTO on DMSS

First Log in at the VTO Web Interface

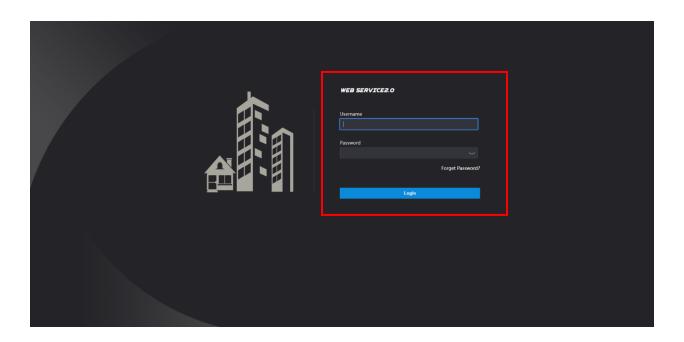

Go to the Network Settings and make sure that the status is Online

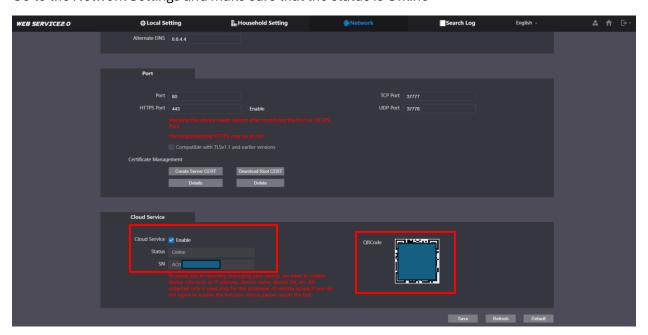




Open the DMSS app and then, Click the icon at the upper right corner \oplus to add device






Select Scan QR Code

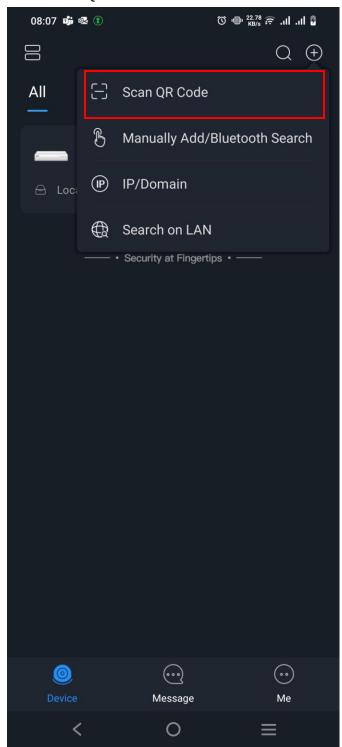




Scan the QR code at the network settings of the web interface

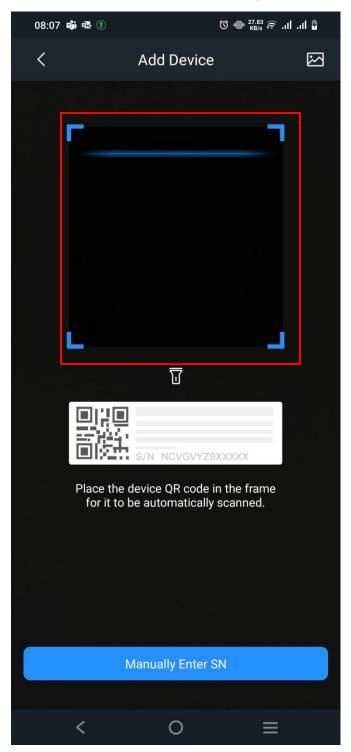




After scanning continue the process by clicking the **Next button**

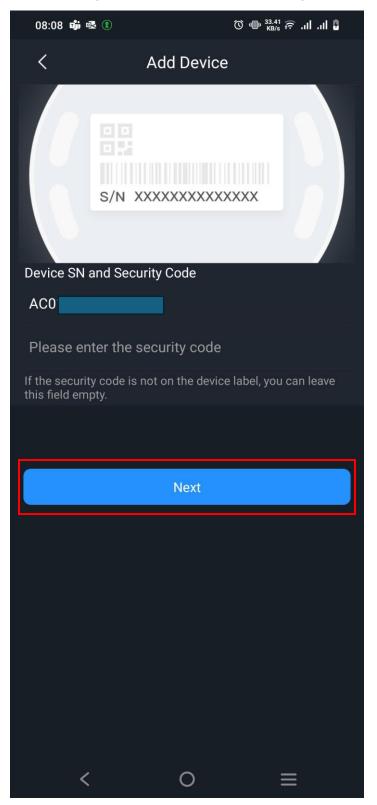




Select the device type you are adding, for this demo we use VTO

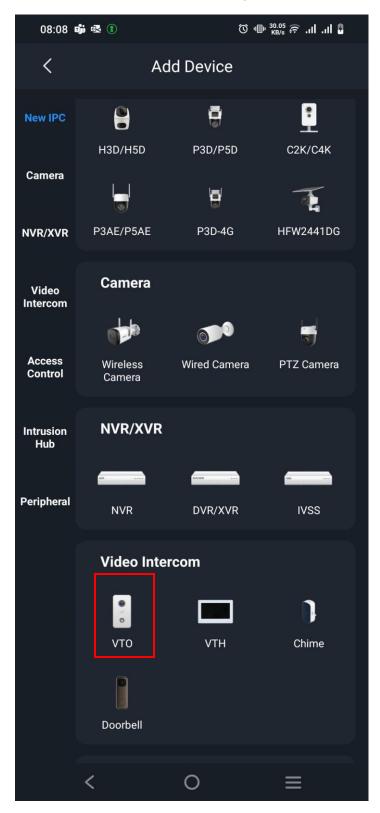




Add the device name, username and password.

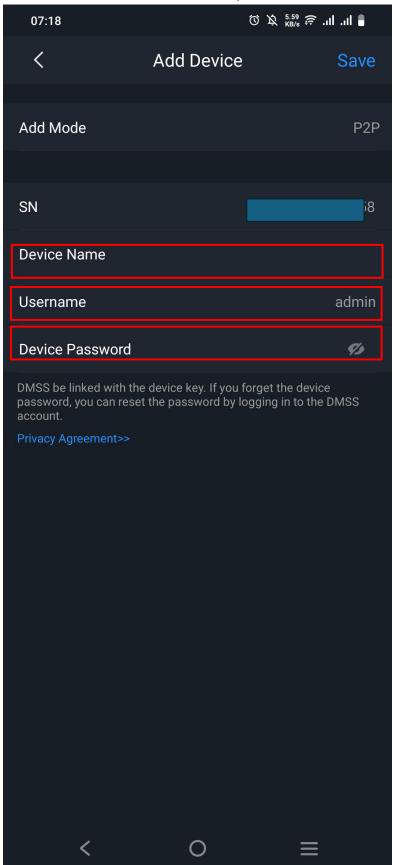




After successfully adding the device, you will see the live view of the intercom

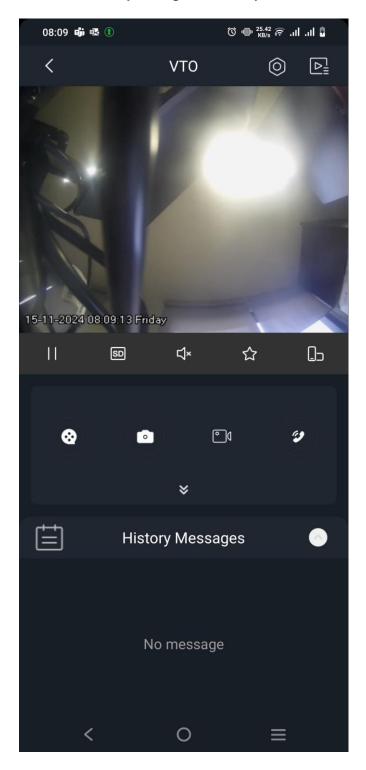




To enable the call Notification, select the \dots and click the Device Details

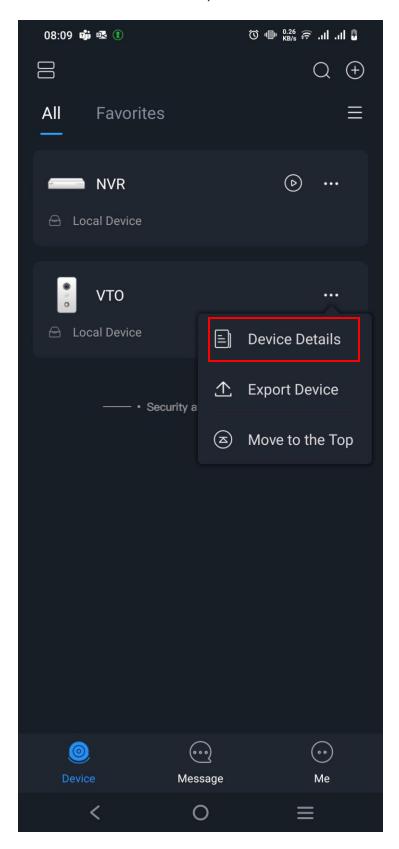




Click the Notification tab

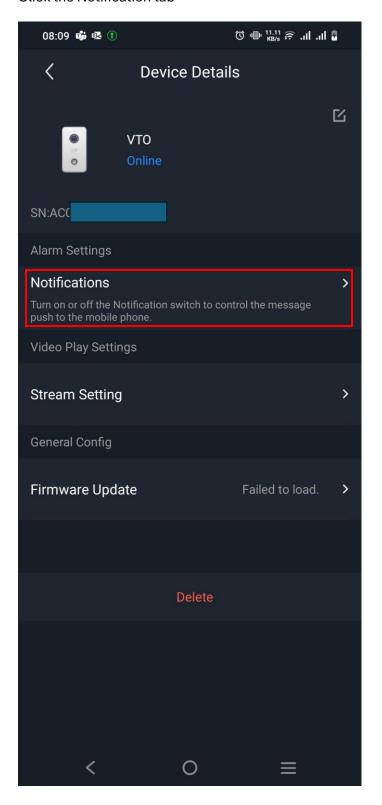




Make sure that the notification is Enable and then click the OK button and Test the System

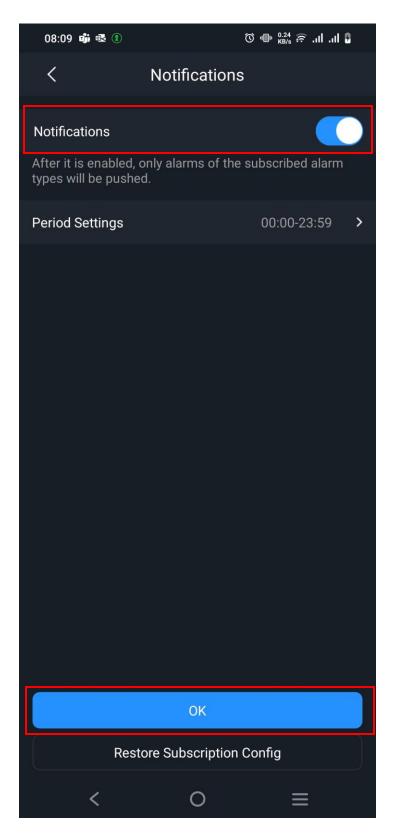




The QR code can also find at VTH (Indoor Monitor) by Selecting the Monitor Tab

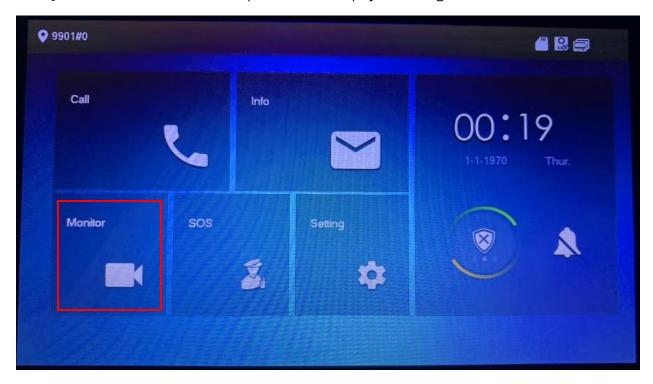

Under the Monitor Tab, Click the QR code Icon under the Main VTO

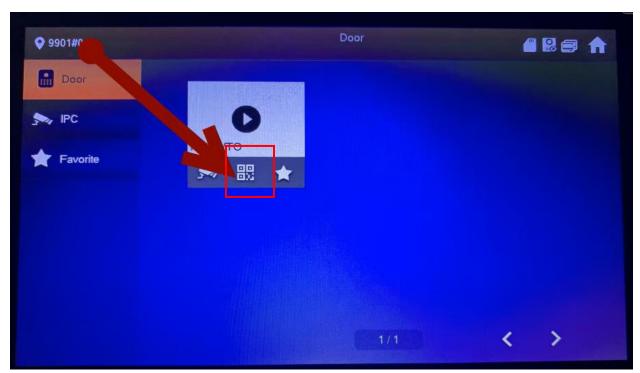



This will display the QR code for the VTO P2P





If you don't have QR code, you can Manually enter the SN of the device to add it

