Technical Quick Guides

Setting up Alarm Hub Out of Box


In this Quick Guide we are going to be Setting up the Dahua Wireless Alarm Hub 2 from out of the box step by step!





Inside the Alarm Hub Box you should find the Following:

Alarm Hub User Guides & Mounting Screws Power Cable

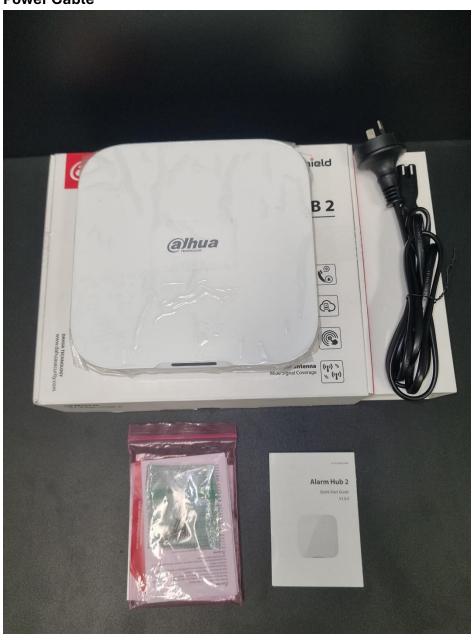



Flip the Alarm Hub over and you should see a back Panel with 2 screws on the bottom side. Unscrew these to be able to pull the cover off.





Once these are unscrewed, push down on the panel and slide it off!





With the cover off, there are two types of AP Buttons, on the Alarm Hub contains a switch and the Alarm Hub 2 contains a button as shown in the picture below.





Plug in your Power Connector in the left hand side that says "Power"






Once you have plugged in your device and powered it on through the power outlet and also flipped the power switch to the left side which will say "ON" (Circled in the photo) a green light should appear. If the device lights up, we can move onto the next step through the DMSS App.






Download the DMSS App through the Apple Store or Play Store depending on if you have iOS or Android Phone and Make an account within the App. Once you have logged into your DMSS Account you should see a screen like the image below. We are now going to add the Hub by pressing the Add Device Button.

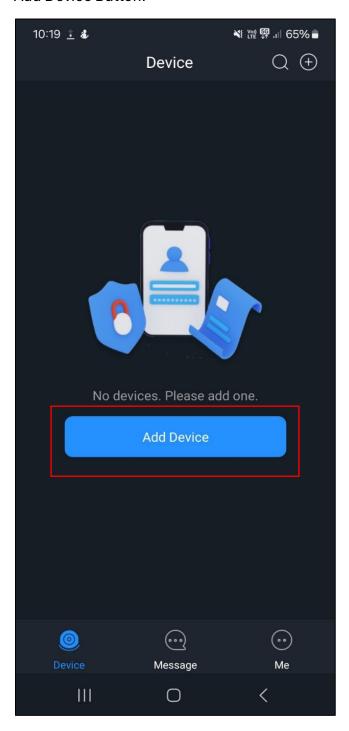




It should take you to your camera and ask you to scan the QR Code, the QR is located on the back at the bottom of the Hub as circled.

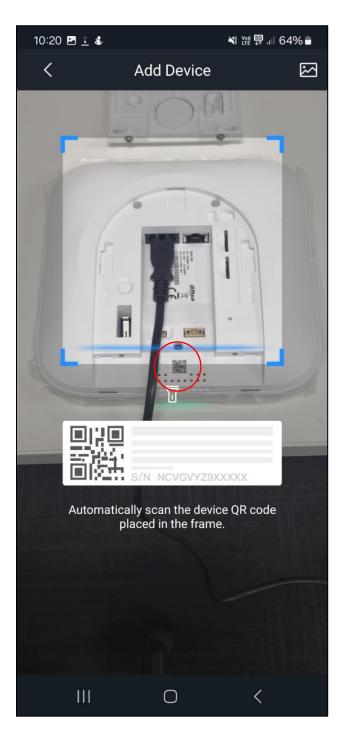




Once you Have scanned the QR code it should show a screen like this. Just press the next button as there is no security code to put in.

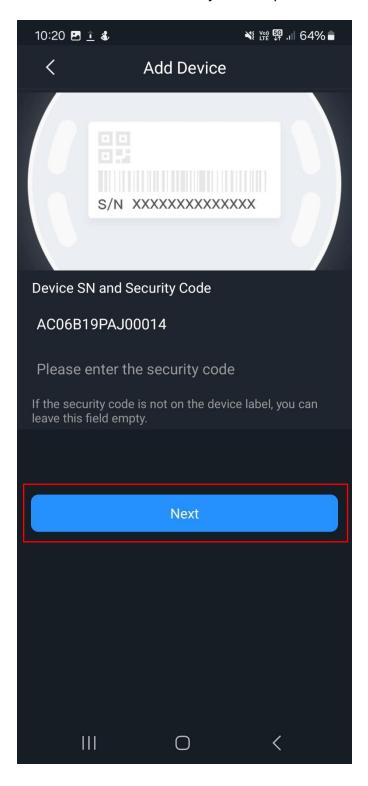



It takes you to a screen with instructions on what to do.

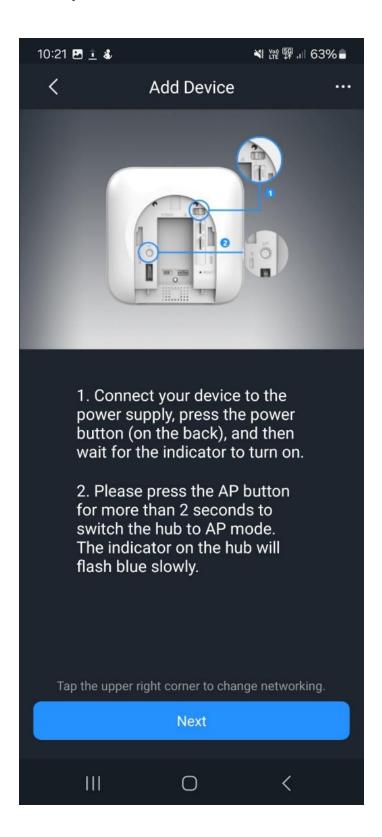




Our Device is already turned on so what we are going to do is Press and Hold the AP Button for 2 Seconds (Or on older models flip the Switch to AP) and a Blue Light Should Start Flashing.






Once the Light is flashing blue, we are then going to Press "Next" on the screen with instructions that is on the DMSS App. This should take us to another screen and ask us if we want to connect to the Alarm Hubs Temporary network. Press Connect

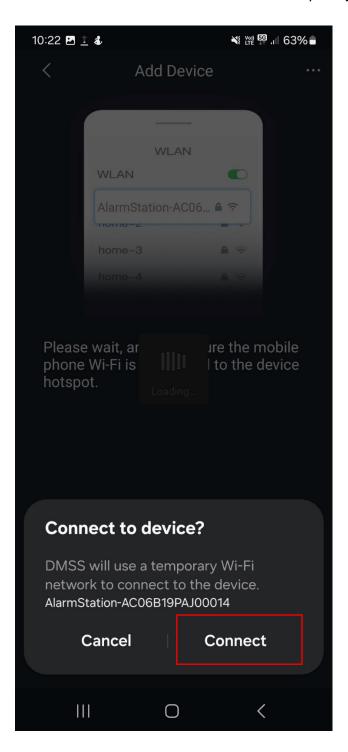




Once it has Successfully Connected it should take you to another Screen which will make you create a username and password for the device and add your email. (Email is optional) Fill Out the form and press Next

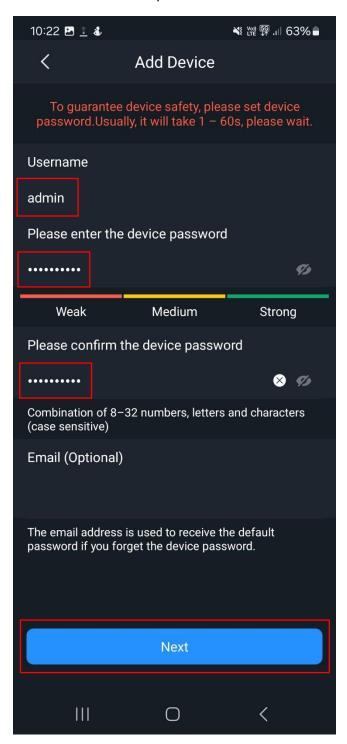




Once you press next it should take you to the following screen, please press Select Network Config Type to choose how you want the Hub to be Connected to your internet. For this Guide we are using a Wireless Connection.

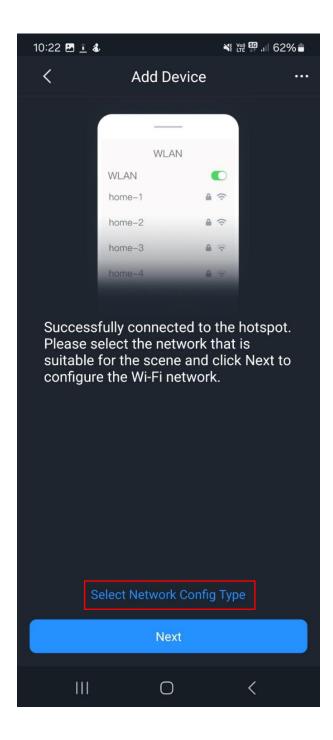




It should pop up with a small menu at the bottom of the screen. Select Wi-Fi

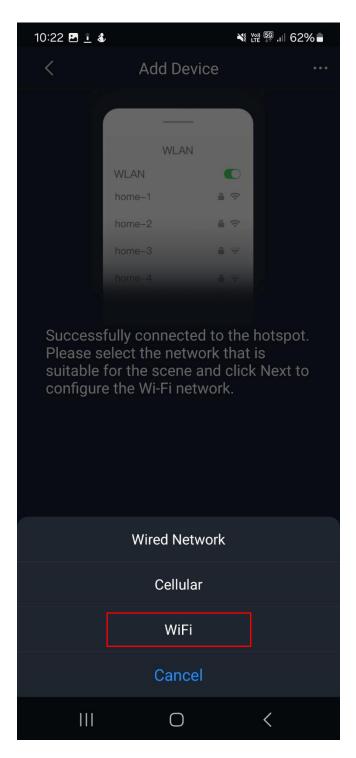




A screen should show up with any Networks around you, Select the Network you wish the Hub to function on and put the password in and select Next.

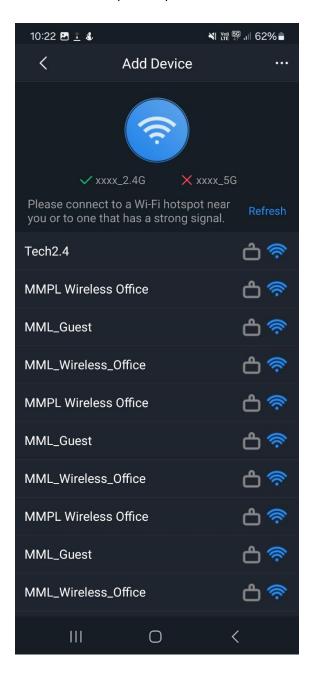




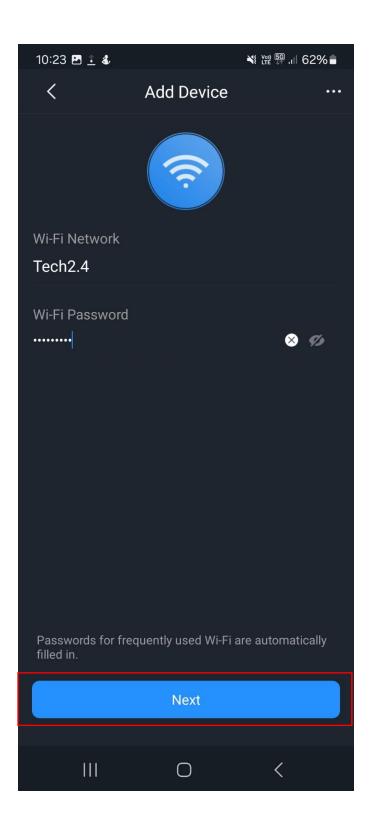




Once you hit the Next button the Hub should start Connecting to the Wi-Fi and it will take you to another screen saying connected.

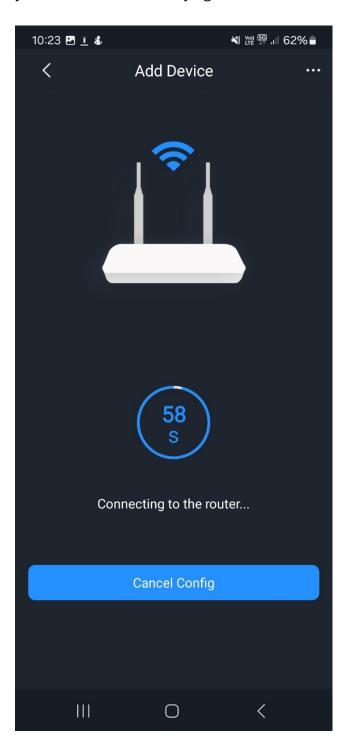



Once Connected your Alarm Hub Should be Flashing Yellow as Shown in the Screenshots Below.

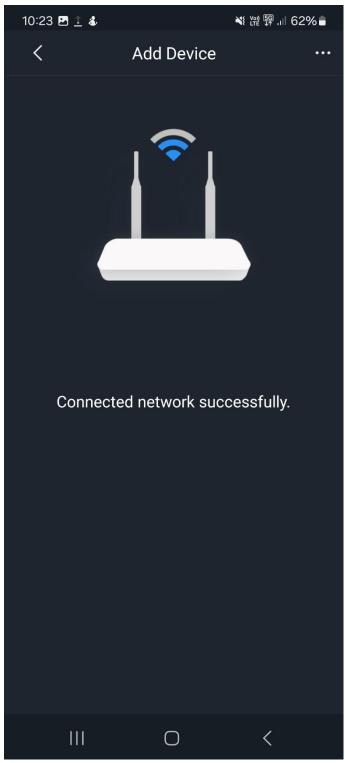









The DMSS App should take you to another screen allowing you to create the Device Name, please enter the name you wish and press save in the top right hand corner.

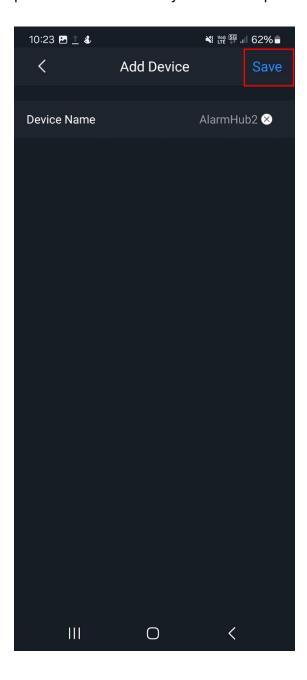



It will now ask you to select your Time, please select and press Done.

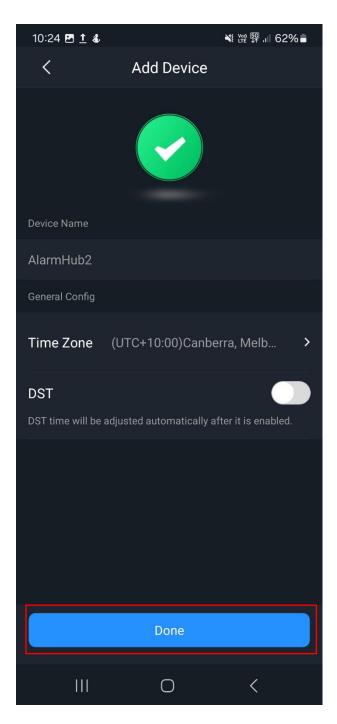



Once you have pressed done the device should be connected to your DMSS and you have successfully added and configured the device!

Note: if the alarm Hub is still flashing yellow, please arm and disarm the system and that will change the alarm panel to green indicating it is completely setup and disarmed.

